



8 Steps for Easy Assembly

BEFORE YOU START

Place the entire pallet of drawer components in the assembly area. (A scissor-lift will enhance your efficiency by allowing you to raise the work to a comfortable level.)

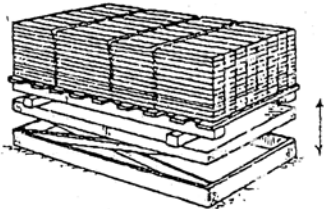


1 WIPE AWAY DUST

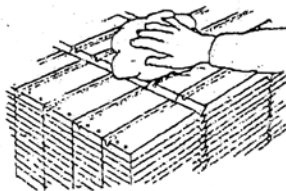

Wipe all dust and other particles from drawers if necessary.


2 GLUE THE MITERS

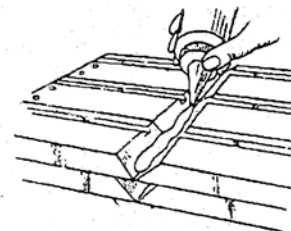

Apply wood glue to each row of miters. A dab of wood glue in the dowel holes is also recommended.


3 GLUE THE BOTTOM GROOVE

OPTIONAL

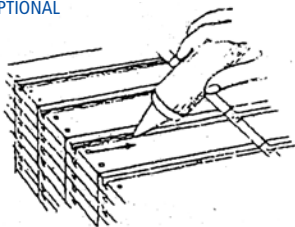


Apply wood glue to the bottom groove. (This will "hold the square" of the finished drawer, and double its strength.)

4 INSERT THE BOTTOMS

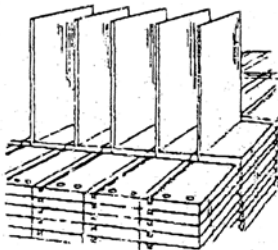


Place drawer bottoms in bottom grooves across entire pallet.

5 FOLD UP THE SIDES

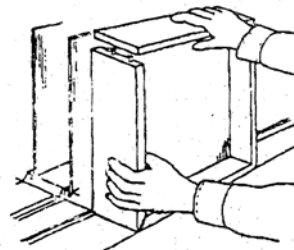


Fold the miterfold drawers around the bottoms.

6 SEAT THE DOWELS

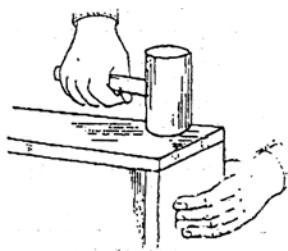


Tap the dowels gently into place, positioning the mallet in the center of the drawer side.

7 HOT MELT DRAWER

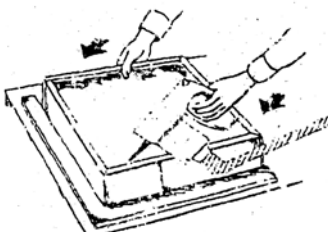

Hot melt drawer bottom while nesting in a square jig.

8 STACK THE DRAWER

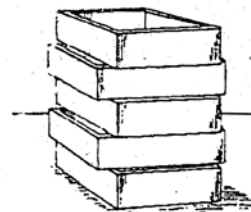

Stack the assembled drawer to allow hot melt to cure.

For more information and to see how Olon drawer components can benefit you, please contact us at the office nearest you.

Olon Industries Inc.

Georgetown, ON
Tel: (800) 387-2319
Fax: (905) 877-7383

Washington, IN
Tel: (800) 522-8521
Fax: (812) 254-2981

OLON 
www.olon.com